

Service Manual

ORDER NO.
RRV1221

STEREO TURNTABLE

PL-J230

- Refer to the service manual ARP1478 for PL-Z91/ZEBM.

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	PL-J230		
ZDLEBM	○	DC power supplied from other system component	

- This product is a system(s) component.

This product does not function properly when independent; to avoid malfunctions, be sure to connect it to the prescribed system component(s), otherwise damage may result.

This product's instructions are contained within the instruction manual of the related system component(s).

The manual is packed with those component(s).

CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

PL-J230/ZDLEBM and PL-Z91/ZEBM have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		PL-Z91/ZEBM	PL-J230/ZDLEBM	
NSP	Sub-panel assembly	PXA1113	PXA1107	
	Speed button	PAC1226	PAC1726	
	EV button	PAC1227	PAC1724	
	S/S button	PAC1228	Not used	
	Cut button	Not used	PAC1722	
NSP	Front name plate	PAM1156	Not used	
	Badge	Not used	AAM1047	
	Dust cover	PNV1008	PNV1014	
	Under base	PNW1291	PNW2272	
	Arm assembly	PPD1016	PPD1031	
NSP	Cut rod	Not used	PBH1038	*
NSP	Size rod	PBH1039	Not used	
NSP	S/S rod	PBH1042	Not used	
	Protector (R)	PHA1045	PHA1233	
	Protector (L)	PHA1046	PHA1234	
NSP	Button stopper F	PBK1038	Not used	*
	Button stopper R	Not used	PBK1037	
	Packing case	PHG1163	PHG2116	
	Panel	PNW1294	PNW2570	
	Start lever	PNW1293	Not used	
	PU plate assembly	PXA1109	Not used	*
	PU plate (B) assembly	Not used	PXA1114	

Note : Parts marked * are the same as those of PL-Z81/ZEBM which is shown with PL-Z91/ZEBM in the service manual ARP1478.

SUB-PANEL ASSEMBLY

PXA1107 and PXA1113 have the same construction except for the following:


Mark	Symbol & Description	Part No.		Remarks
		PXA1113	PXA1107	
	Select lever spring	PBH1053	Not used	
	Reset plate spring	PBH1054	Not used	
	Select lever	PNB1096	Not used	
	Index cam	PNW1296	Not used	
	Reset plate	PNW1312	Not used	
	Selector	PNW1313	Not used	
	Drive plate assembly	PXA1110	PXA1112 *	

Note : Part marked * is the same as that of PL-Z81/ZEBM which is shown with PL-Z91/ZEBM in the service manual ARP1478.

Service Manual



PIONEER
The future of sound and vision.

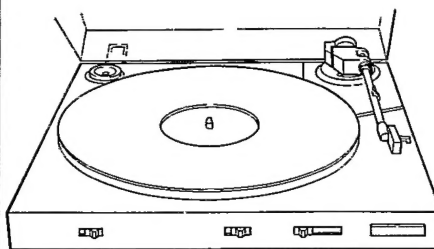

**ORDER NO.
ARP1478**

STEREO TURNTABLE

PL-Z91 ZEBM

PL-Z81 ZEBM

- This service manual is applicable to the PL-Z91/ZEBM and PL-Z81/ZEBM types.

CONTENTS

1. SPECIFICATIONS	2	7. P.C. BOARDS CONNECTION DIAGRAM	13
2. PANEL FACILITIES	2	8. ELECTRICAL PARTS LIST	14
3. PACKING	3	9. PRECAUTIONS FOR REASSEMBLY	15
4. DISASSEMBLY	4	10. ADJUSTMENTS	19
5. EXPLODED VIEWS	6	RÉGLAGE	21
6. SCHEMATIC DIAGRAM	12	AJUSTE	23

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada

PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

MO © JAN. 1988 Printed in Japan

1. SPECIFICATION

Turntable: PL-Z91/PL-Z81

Motor, Platter

Motor Type	DC servo motor
Drive Method	belt drive
Speed	33-1/3, 45 RPM
Speed Variation	0.07% WRMS (JIS $\pm 0.10\%$ WTD) Peak (DIN)
S/N Ratio	68 dB (DIN-B)
Platter	295mm dia., aluminum die-cast

Tonearm

Type	Dynamic-balance type, straight tonearm
------	--

Installed Cartridge

Type	MM type
Replacement Stylus	PN-210
Stylus	0.6 mil diamond
Output voltage	2.5mV (1kHz, 3.54cm/s, Lat. peak)
Tracking Force	2-3.0g (optimum 2.5g)
Frequency Response	20Hz to 20,000Hz
Load Resistance	47k Ω
Cartridge Weight	4g

Other


Dimensions	360W \times 90H \times 350.5D(mm)
Weight	
PL-Z91	2.7kg
PL-Z81	2.7kg

Accessories

EP Adaptor	1
------------	---

Specifications and design subject to possible modifications without notice due to improvement.

2. PANEL FACILITIES

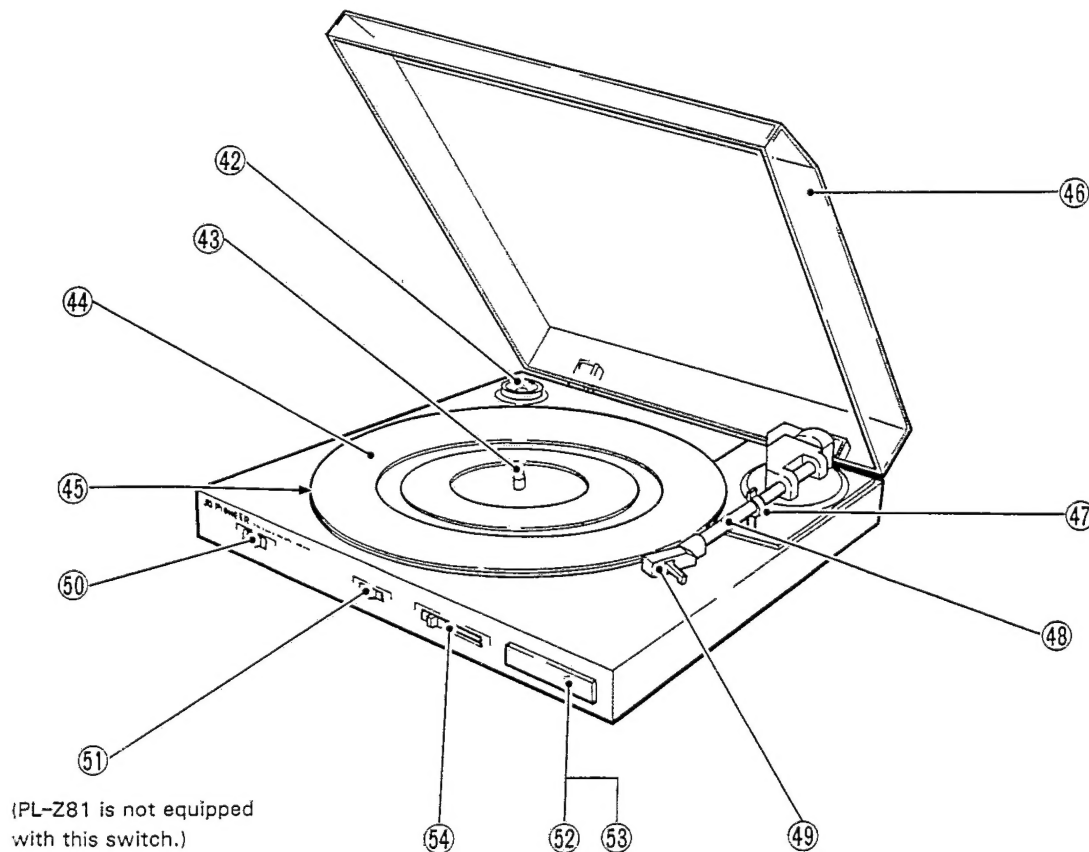

- ④② EP adaptor
- ④③ Platter shaft
- ④④ Platter mat
- ④⑤ Platter
- ④⑥ Dust cover
- ④⑦ Arm rest
- ④⑧ Tonearm
- ④⑨ Cartridge

⑤① SPEED switch

Set this switch in accordance with the speed of the record.
33: For 33-1/3 rpm records. 45: For 45 rpm records.

⑤① DISC SIZE switch (only PL-Z91)

Set this switch in accordance with the size of the record.
30: For 30 cm LP records. 17: For 17 cm EP records.

⑤② PLAY/STOP switch (only PL-Z91)

Press this switch when starting auto play or when stopping play.

NOTE:

Be sure to press the switch firmly when starting playback; if not pressed firmly, the platter may rotate without the tonearm moving.


⑤③ CUT switch (only PL-Z81)

Press this switch when stopping play.

⑤④ ARM ELEVATION switch

- Use the switch for manual play.
 - Use the switch to suspend record play temporarily.
 - Use the switch when changing the tracks during actual play.
- [UP]: The tonearm rises (the stylus moves away from the record).
[DOWN]: The tonearm descends (the stylus is lowered onto the record).


3. PACKING

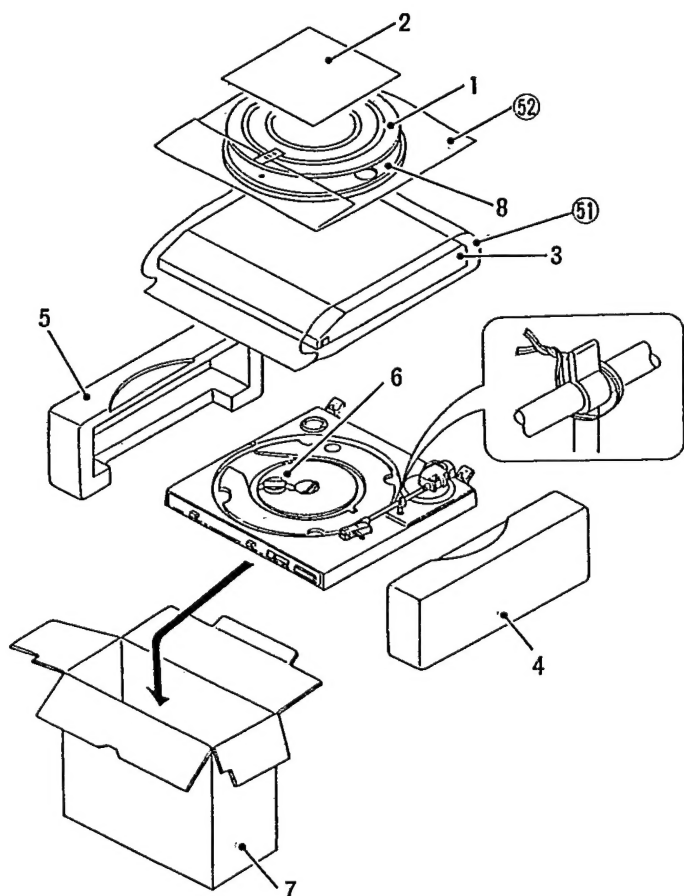

Parts List of Packing (PL-Z91 and PL-Z81)

Mark	No.	Part No.	Description
	1.	PEB1059	Turntable sheet
	2.	PRH1007	Turntable mat
	3.	PNV1008	Dust cover
	4.	PHA1045	Protector (R)
	5.	PHA1046	Protector (L)
	6.	PEC1002	45 adaptor
	7.	PHG1163	Packing case (For PL-Z91)
		PHG1158	Packing case (For PL-Z81)
	8.	PNR1020	Turntable
			Mirror mat
			Vinyl bag

4. DISASSEMBLY

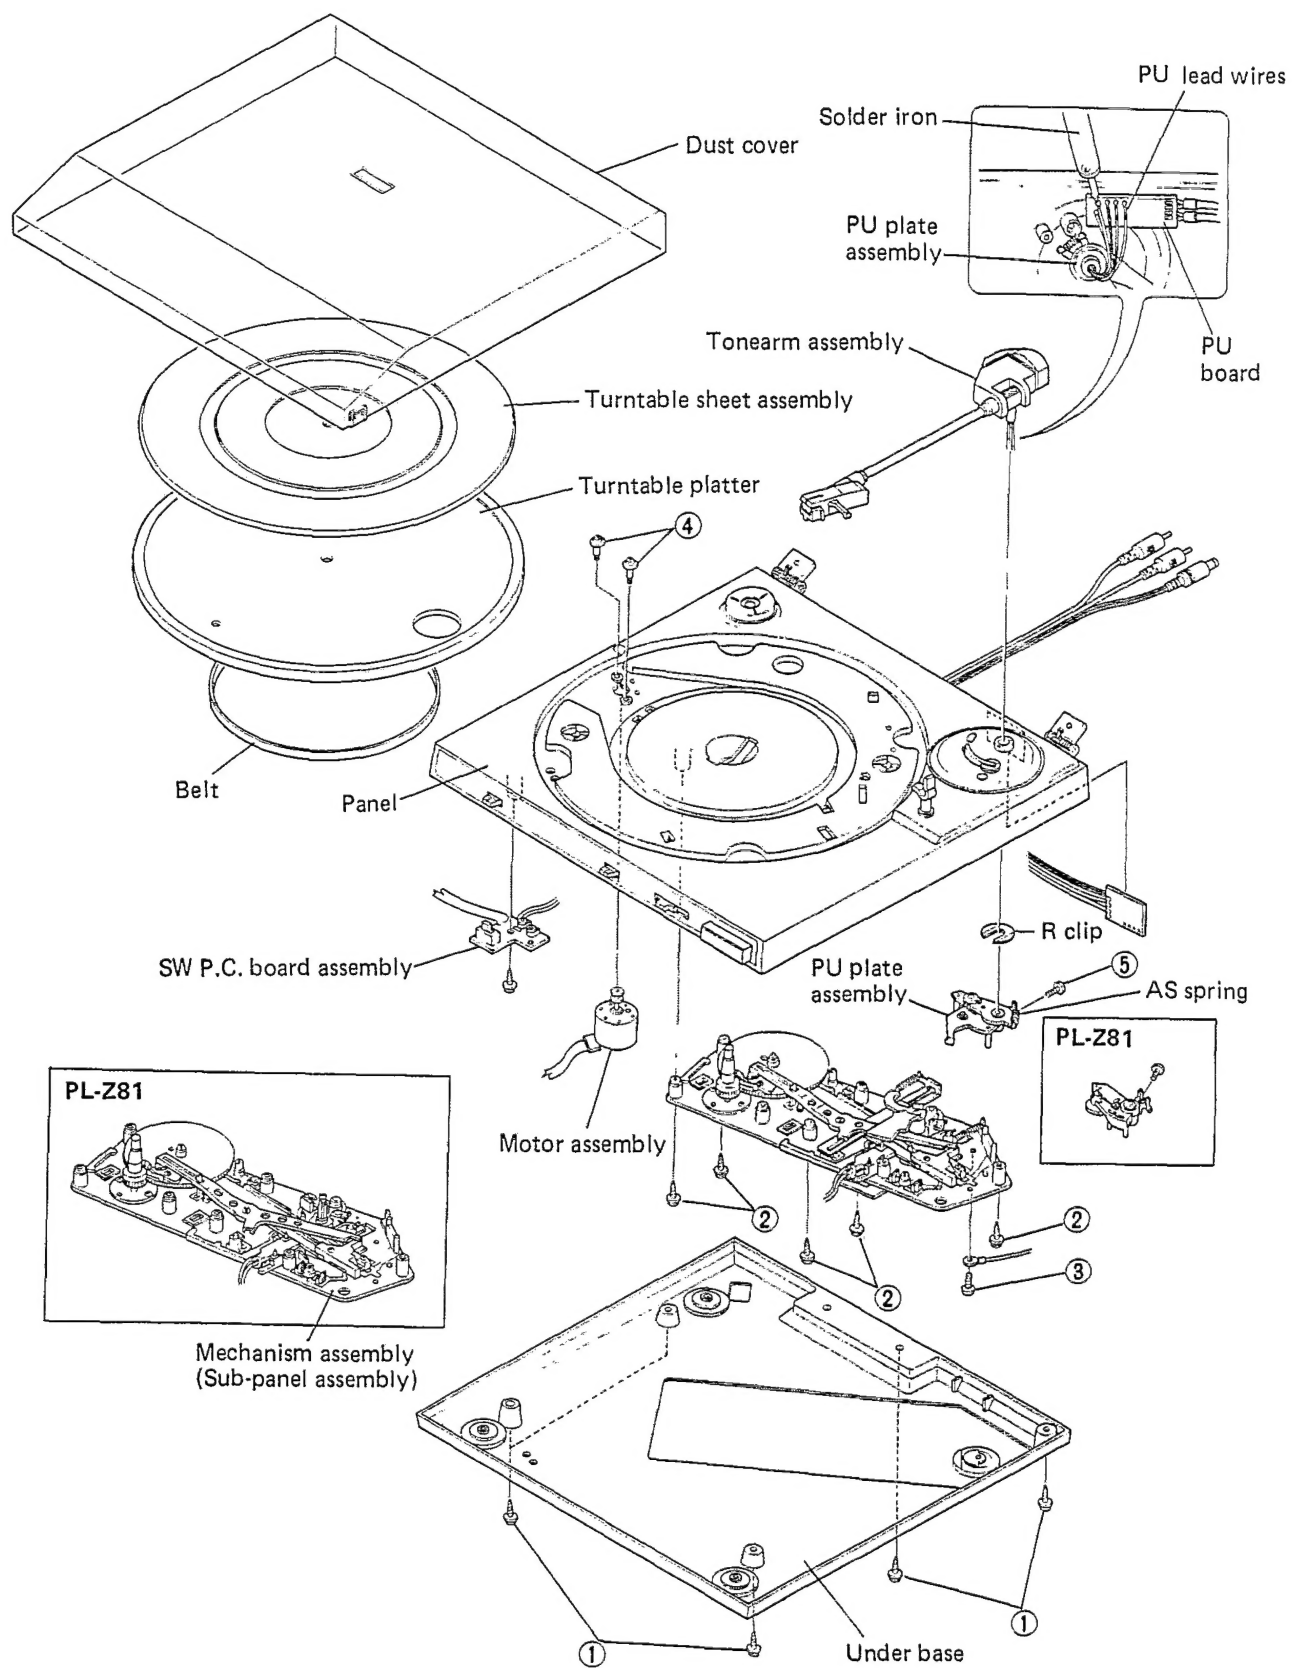

- **Mechanism Assembly (Sub-panel Assembly) and Motor**

1. Rotate the turntable platter to disengage the mechanism.
2. Fix the tonearm to the arm rest. (Be sure to cover the stylus with the stylus cover.)
3. Remove the turntable sheet assembly and then the turntable platter.
4. Close the dust cover, turn the turntable upside down, and place it on a soft surface, e.g., a work bench covered with soft cloth (for product protection).
5. Remove the five screws labeled ①, and remove the under base.
6. Remove the five screws labeled ② and one screw labeled ③, and remove the lead connected to the microswitch. This operation will release the mechanism assembly.
7. Remove the two screws labeled ④ to remove the motor assembly.

- **Tonearm assembly**

1. Remove the mechanism assembly from the panel.
2. Unsolder and disconnect the PU leads (arm leads) from the PU printed circuit board.
3. Remove the AS spring from the PU plate assembly.
4. Remove the screw labeled ⑤, and remove the PU plate assembly from the tonearm assembly.
5. Remove the R clip.
6. Place the turntable on one of its sides, remove the arm clamp, and gently pull out the tonearm assembly from the panel.

5. EXPLODED VIEW

5.1 EXTERIOR


NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Parts List of Exterior

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	PXA1106	PU cord assembly		37.	BPZ26P120FZK	Screw
	2.	CKDYF103Z50	Ceramic capasistor		38.	PAM1156	Front name plate (For PL-Z91)
★	3.	PPD1016	Arm assembly			PAM1155	Front name plate (For PL-Z81)
	4.	PEB1059	Turntable sheet		39.	PNW1294	Panel (For PL-Z91)
★★	5.	PEB1060	Belt <i>51-P42008</i>			PNW1292	Panel (For PL-Z81)
	6.	PNR1020	Turntable		40.	PAC1226	Speed button
	7.	PBA-112	Screw		41.	PAC1227	EV button
	8.	PEB1063	Rubber		42.	PAC1228	S/S button
	9.	PBK1033	R clip		43.	PEC1002	45 adaptor
★	10.	PNW1289	Arm rest		44.	PYY1047	Motor assembly
	11.	PBF-020	Washer		45.	PNW1319	Stylus cover
	12.	PBH1044	AS spring		46.	PXV1004 <i>NSP</i>	Cartridge
	13.	PBH1046	EV spring				
	14.	PNW1290	EV sheet				
	15.	IPC30P100FMC	Screw				
	16.	PBH1050	EV lever spring				
	17.	PBH1051	Elevation cam spring				
	18.	PED-051	Washer				
	19.	PNW1309	Elevation cam				
	20.	PXT1017	EV plate spring (D) unit				
	21.	WT31D054D050	Washer				
	22.	PXA1109	PU plate assembly (PL-Z91 only)				
	23.	PXA1114	PU plate (B) assembly (PL-Z81 only)				
	24.	PMD40P080FMC	Screw (PL-Z81 only)				
	25.	WC40FMC	Washer				
	26.	YS40FBT	Washer				
	27.	IPC30P100FMC	Screw				
	28.	IPC30P290FMC	Screw				
	29.	PBK1038	Button stopper F (PL-Z91 only)				
	30.	PBK1037	Button stopper R (PL-Z81 only)				
	31.	PSZ30P060FMC	Screw				
	32.	PNV1008	Dust cover				
	33.	PXA1108	Hinge assembly				
	34.				
	35.	PEB1061	Insulator				
	36.	YP40FBK	Nut				

MSP 101 PWX 1022
PXA 104 NOT AVAILABLE
SW P.C. board assembly
Sub-panel assembly
PU plate spring
Screw (PL-Z91 only)
PU plate (A)
106. PU plate (B)
107. PU spring washer
108. PBH 1034 EV rod
109. Size rod (PL-Z91 only)
110. S/S rod (PL-Z91 only)
111. Cut rod (PL-Z81 only)
112. S/S spring
113. Rubber
114. PNW 1291 Under base
115. Start lever
47 PXV1003 Cartridge without stylus
51-P42018
** PNP1073 SW. PC Board*

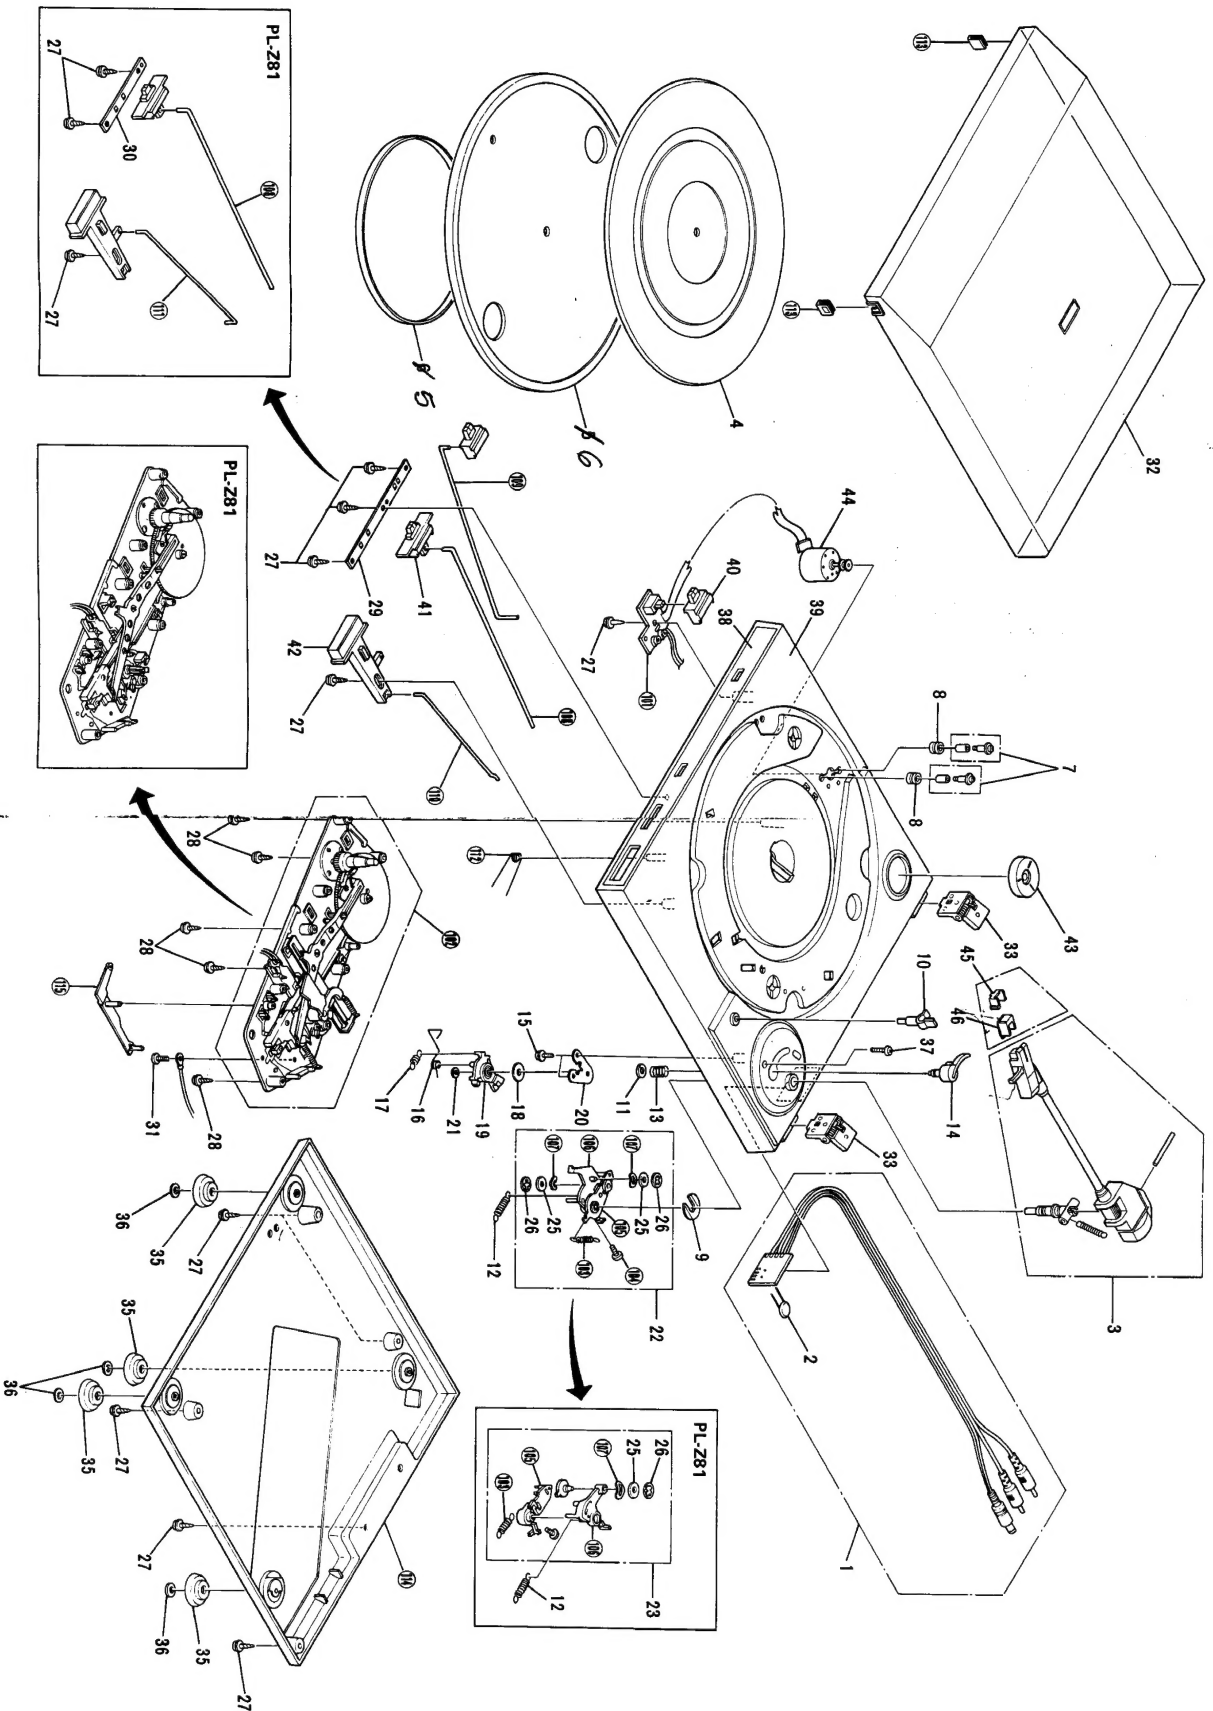


-Z91

1

2

3

5.2 SUB-PANEL ASSEMBLY (PL-Z91)

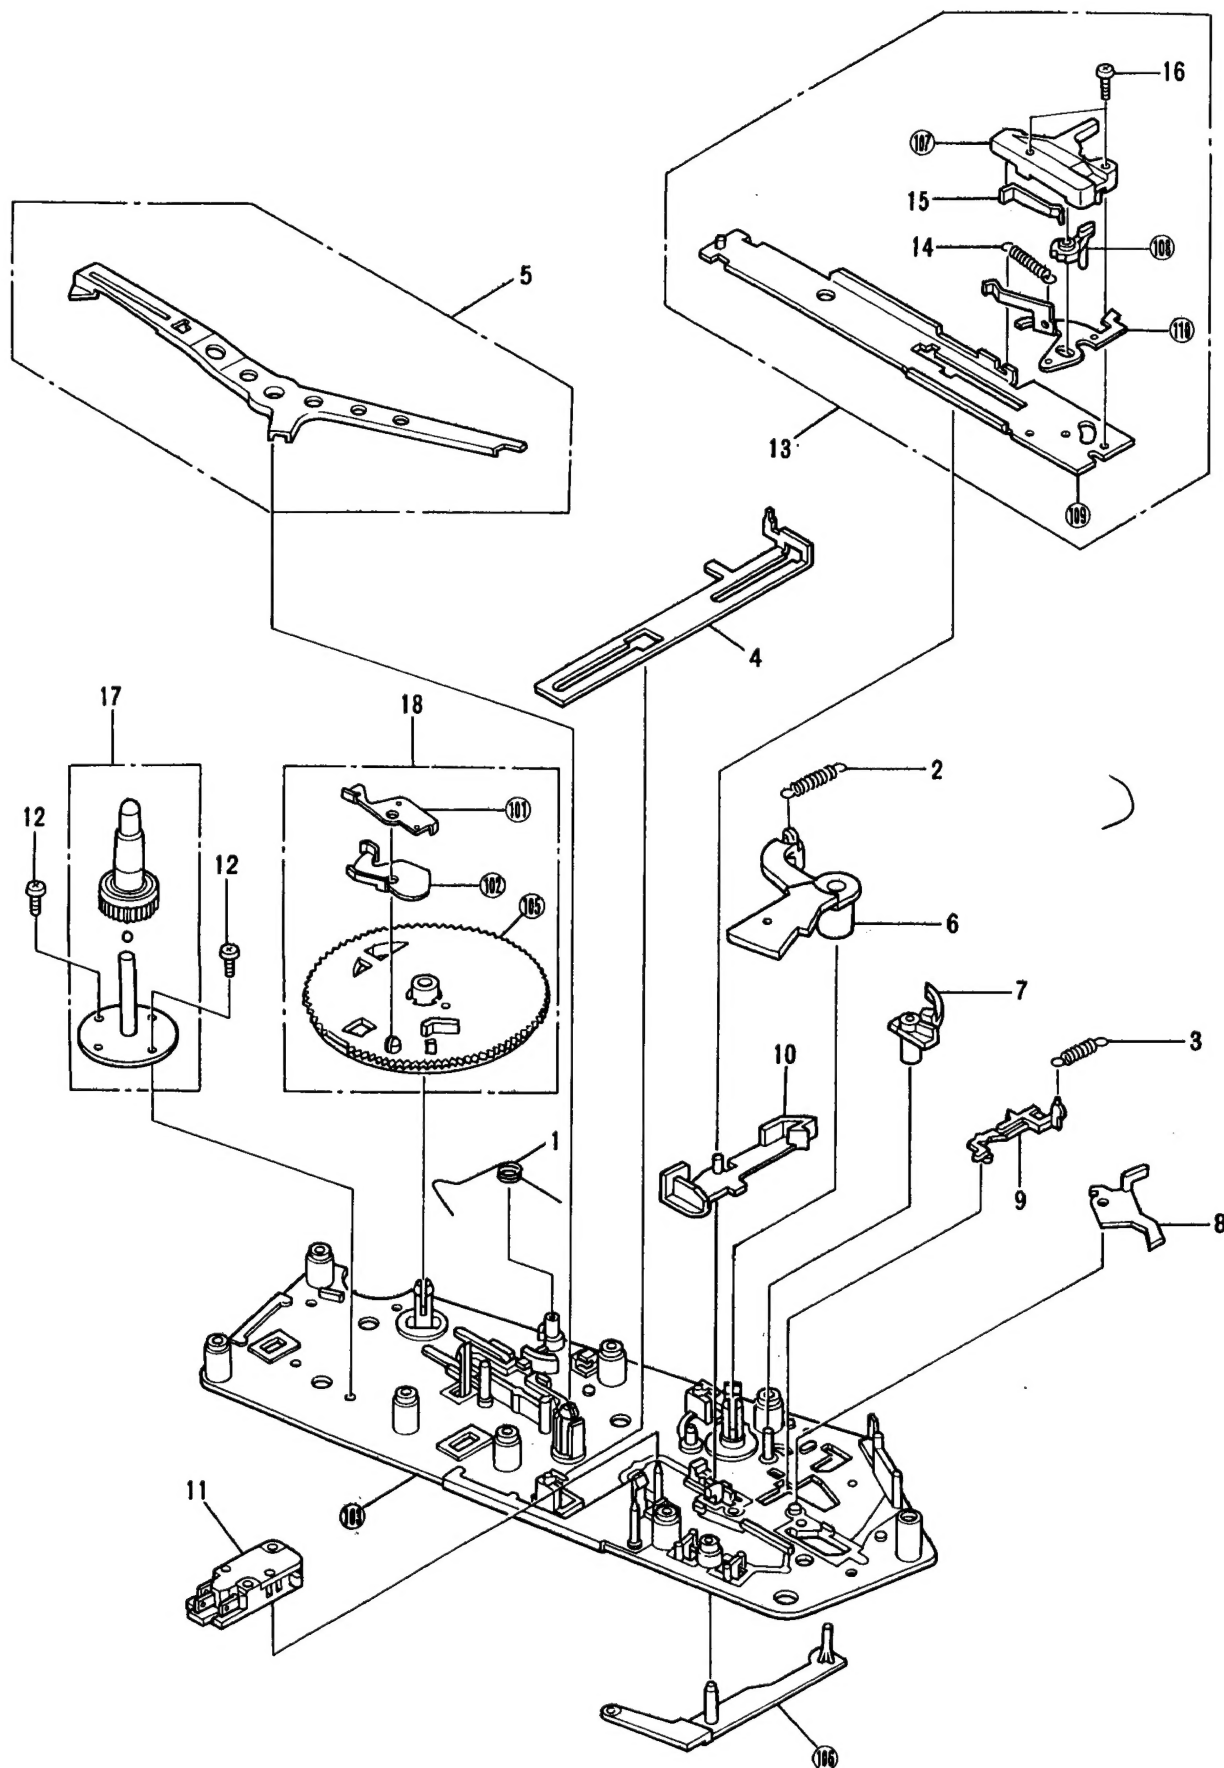


Parts List of Sub-panel (PL-Z91 and PL-Z81)


Mark	No.	Part No.	Description
	1.	PBH1040 1063	Lock spring <i>5-742018</i>
	2.	PBH1053	Select lever spring (PL-Z91 only)
	3.	PBH1054	Reset plate spring (PL-Z91 only)
	4.	PNB1096	Select lever (PL-Z91 only)
	5.	PNB1098	Detector lever
	6.	PNW1296	Index cam (PL-Z91 only)
	7.	PNW1301	Switch locker
	8.	PNW1312	Reset plate (PL-Z91 only)
	9.	PNW1313	Selector (PL-Z91 only)
	10.	PNW1314	Switch lever
△ ★★	11.	PSF-023	Microswitch (POWER, S1)
	12.	PSZ30P060FMC	Screw
	13.	PXA1110	Drive plate assembly (For PL-Z91)
		PXA1112	Drive plate assembly (For PL-Z81)
	14.	PBH-224	Start plate spring
	15.	PBK-038	Click plate spring
	16.	PSZ30P100FMC	Screw
	17.	PXA1111	Shaft assembly
	18.	PYY1046	Cam assembly

Mark	No.	Part No.	Description
	101.		Starting plate
	102.		Signal plate
	103.	<i>PNW1295</i>	Sub-panel
	104.	
	105.		Cam
	106.		Start lever (PL-Z91 only)
	107.		EV cam
	108.		Lead-in ratch
	109.		Drive plate unit
	110.		Start plate

5.3 SUB-PANEL ASSEMBLY (PL-Z81)

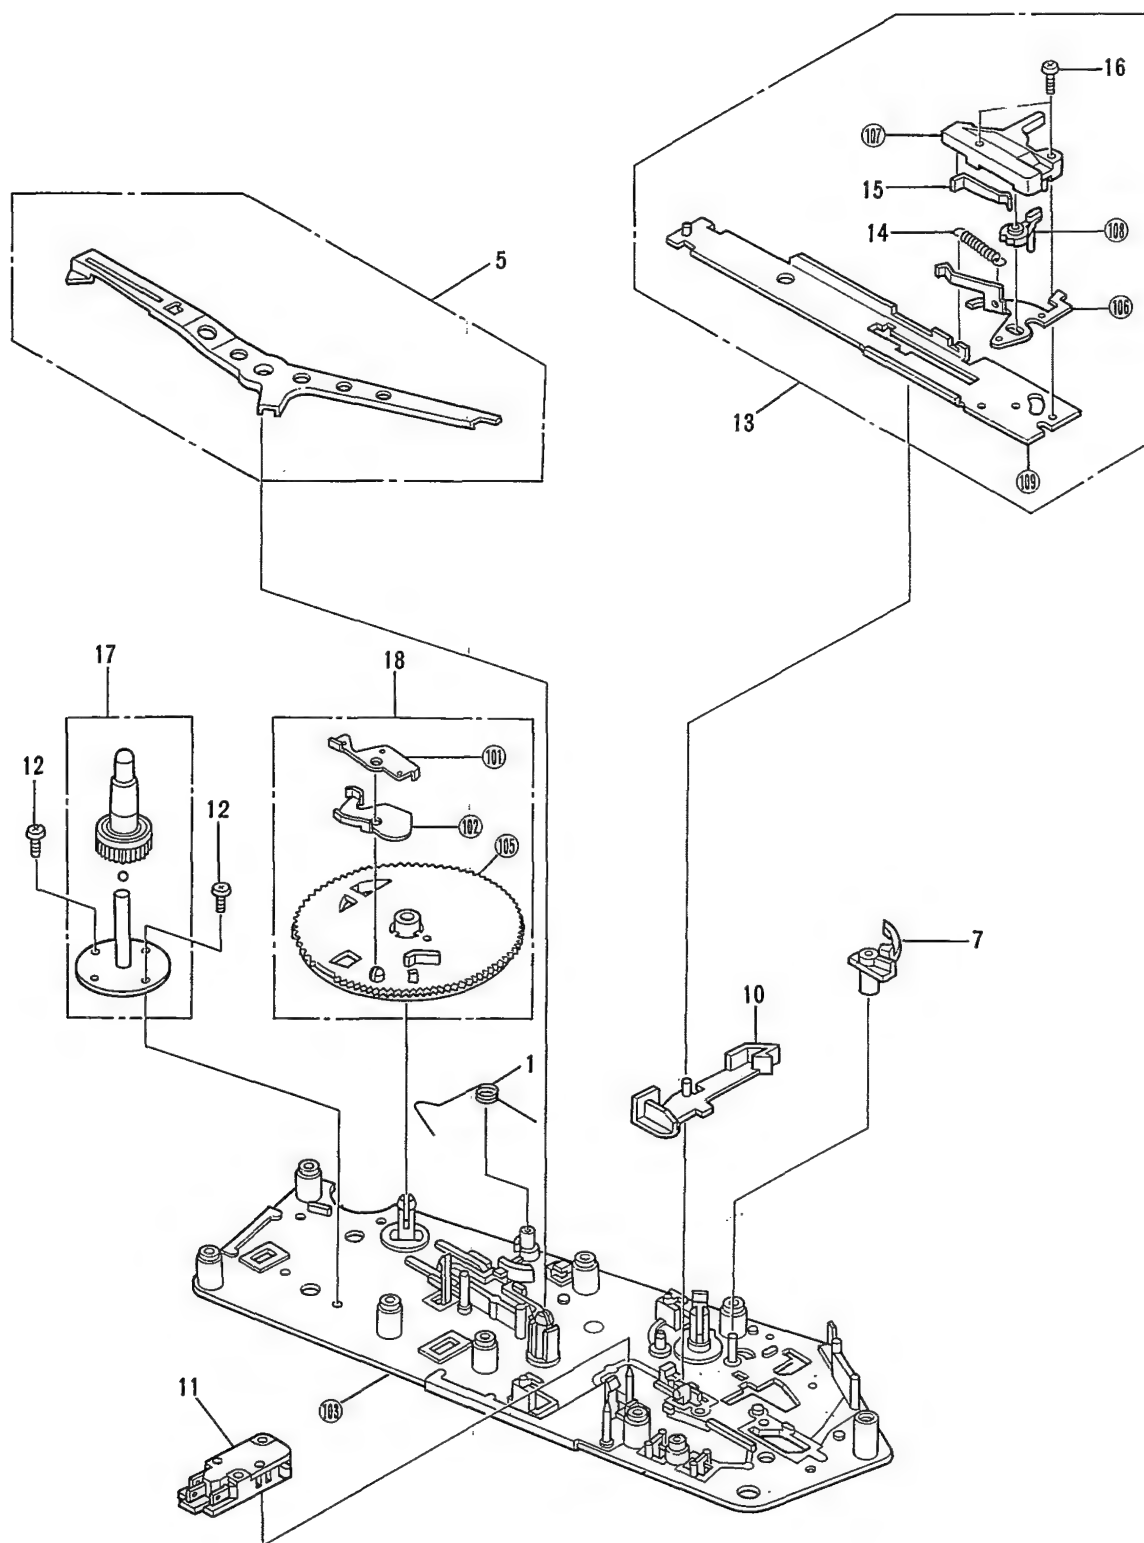

6. SCHEMATIC DIAGRAM

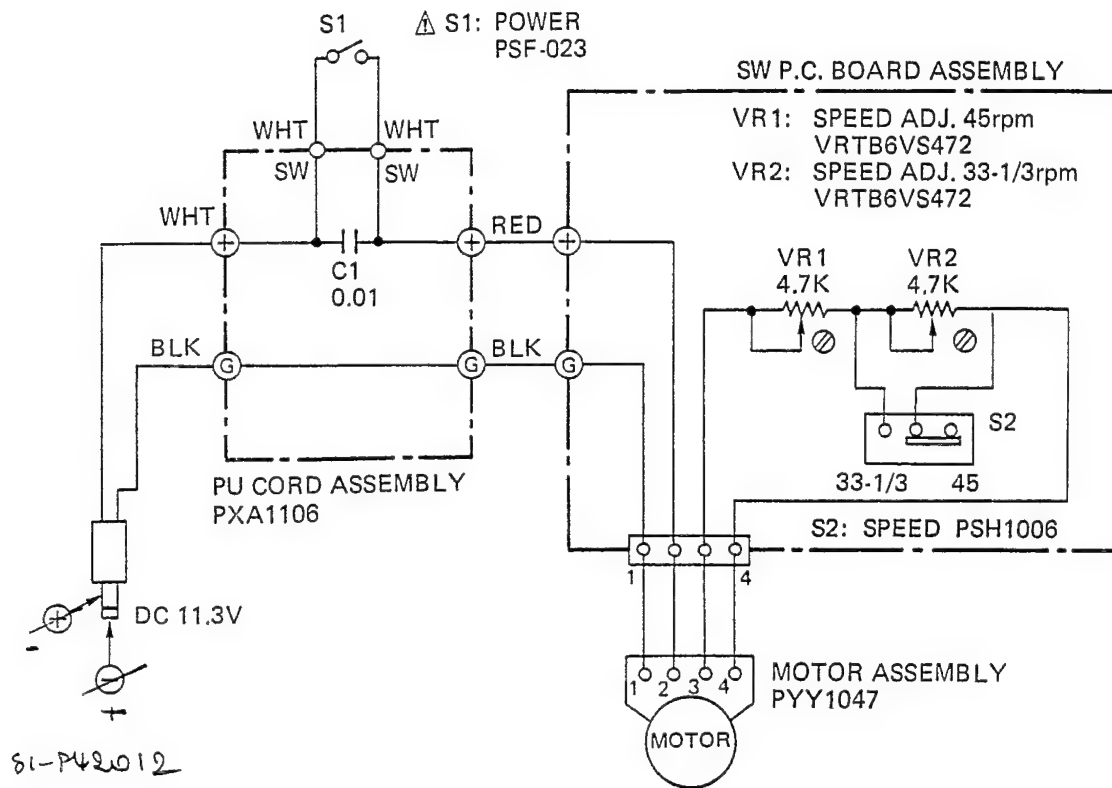

1. RESISTORS:

Indicated in Ω , 1/8W & 1/4W, $\pm 5\%$ tolerance unless otherwise noted k; k Ω , M; M Ω , (F); $\pm 1\%$, (G); $\pm 2\%$, (K); $\pm 10\%$, (M); $\pm 20\%$ tolerance.

2. CAPACITORS:

Indicated in capacity (μ F)/voltage (V) unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:

□; DC voltage (V) at no input signal
Value in () is DC voltage at rated power.
mA; DC current at no input signal

4. OTHERS:

➡; Signal route.
⊗; Adjusting point.

The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.


SWITCHES:

S1: POWER ON — OFF
S2: SPEED 33-1/3 rpm — 45 rpm

The underlined indicates the switch position.

7. P.C. BOARDS CONNECTION DIAGRAM

SI-P42612

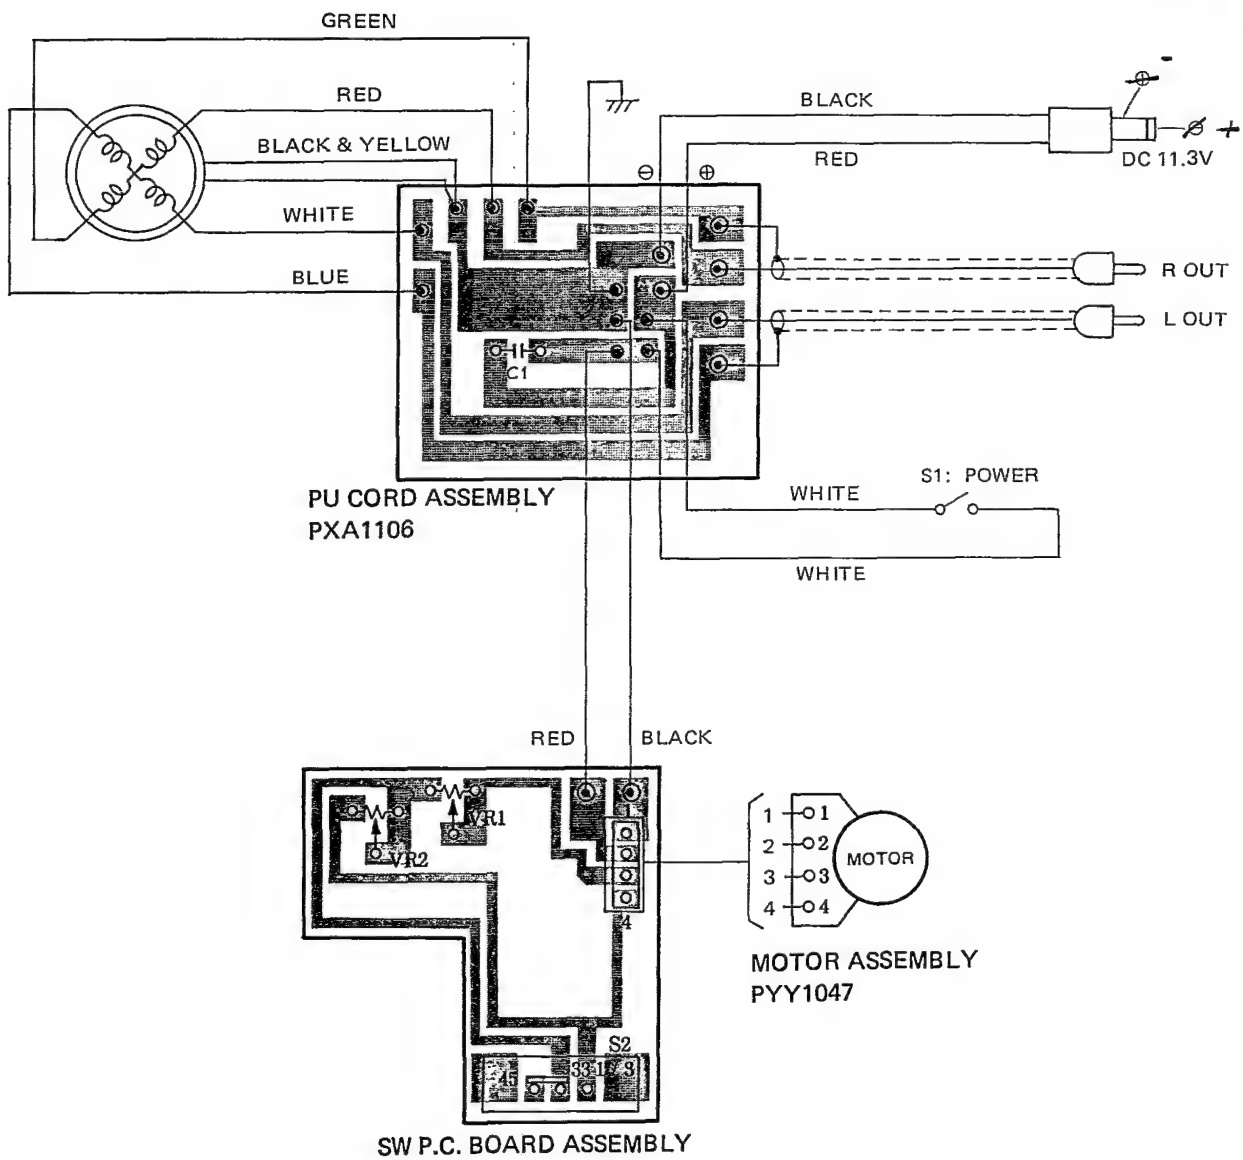

8. ELECTRICAL PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.

★★ GENERALLY MOVES FASTER THAN ★

This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	56×10^1	561.....	RD1/4PS	5	6	1	J
47kΩ	47×10^3	473.....	RD1/4PS	4	7	3	J
0.5Ω	0R5.....		RN2H	0	5		K
1Ω	010.....		RS1P	0	1	0	K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	562×10^1	5621.....	RN1/4SR	5	6	2	1	F
--------	-------------------	-----------	---------	---	---	---	---	---

Miscellaneous Parts

Mark	Symbol & Description	Part No.
	SW P.C. board assembly	
	PU cord assembly	PXA1106
★★	Motor assembly	PYY1047

PU Cord Assembly (PXA1106)

CAPACITOR

Mark	Symbol & Description	Part No.
	C1 Ceramic capacitor	CKDYF103Z50

SW P.C. Board Assembly

SWITCH

Mark	Symbol & Description	Part No.
★★	S2 Slide switch (SPEED)	PSH1006

RESISTORS

Mark	Symbol & Description	Part No.
★	VR1, VR2 Semi-Fixed resistor	VRTB6VS472

9. PRECAUTIONS FOR REASSEMBLY

If new parts have been used, follow these directions and precautions when reassembling a unit after completing repairs. Also lubricate places requiring lubrication. Incorrect mounting of parts or neglecting lubrication may cause problems with the mechanical section. Follow the procedures properly.

9.1 PLACES THAT REQUIRE LUBRICATION

NOTE:

Types of lubricants and places where they are used are listed in table 1.

Type of Oil	Places used
Silicon Oil #500000	EV cam section
GYA-008	all other places requiring lubrication

Lubrication points are specified for greases other than GYA-008. Never use a different type of greases.

• EV Cam Section

Apply grease to the heart-shaped grooved section (rear side of the cam) and lock plate sliding section in order to minimize wear on the sliding section and the burden on the mechanism.

• Driving Plate Assembly

Decrease the burden on the mechanism and the wear on the sliding section.

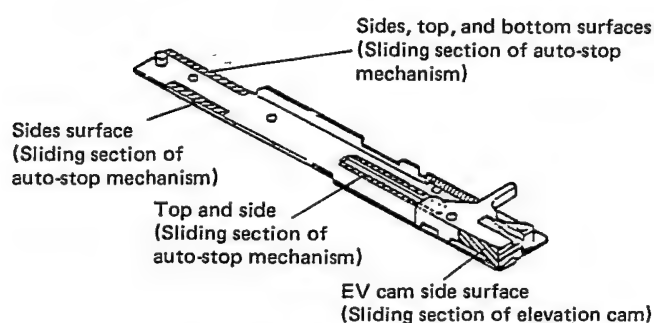


Fig. 9-1 Driving plate assembly section

• Switch Locker Section

Apply grease to the switch locker (hole) and sub-panel base sliding section to decrease the burden on the mechanism.

When applying grease to the hole (shaft hole), do not apply any grease 2—3mm from the button surface. If grease is applied 2—3mm within the bottom surface, it may come out the bottom and go between the switch lever and sub-panel base causing the switch lever to operate ineffectively.

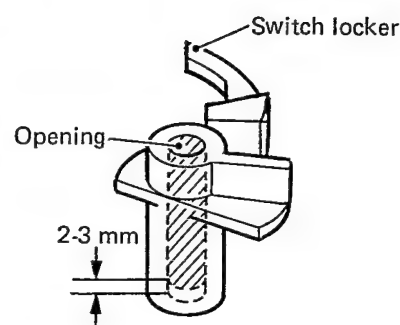


Fig. 9-2 Switch locker section

• EV Sheet Section

Apply grease to the elevation shaft and sliding section of the bearing.

This is to assure stability in the elevation lowering speed.

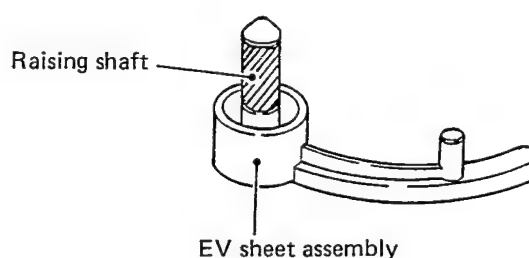


Fig. 9-3 EV sheet section

• Elevation Cam Section

Apply GYA-008 grease to the elevation cam and sliding section of the raising shaft to decrease the burden when operated.

Also apply silicon oil #500000 to the hole. This is to stabilize the elevation lowering speed.

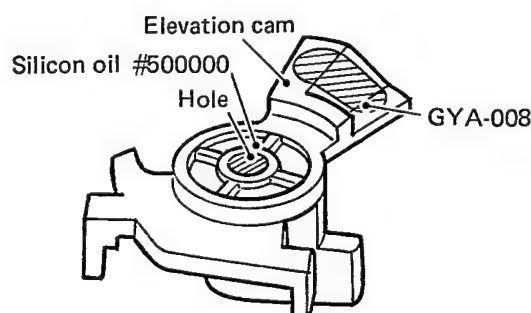


Fig. 9-4 Elevation cam section

- Index Cam Section (PL-Z91 only)

Apply grease to the index cam lower surface of the hooked section to decrease the burden on the mechanism.

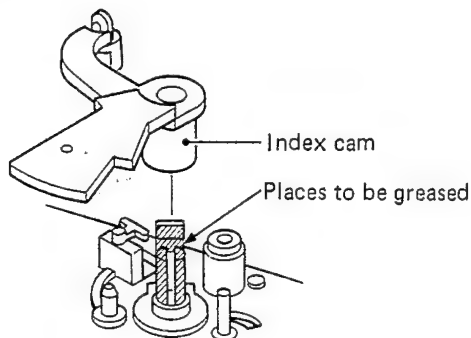


Fig. 9-5 Index cam section

- Reset Plate Section (PL-Z91 only)

Apply grease to the sub-panel base (shaft) and sliding section of the reset plate to decrease the burden on the mechanism.

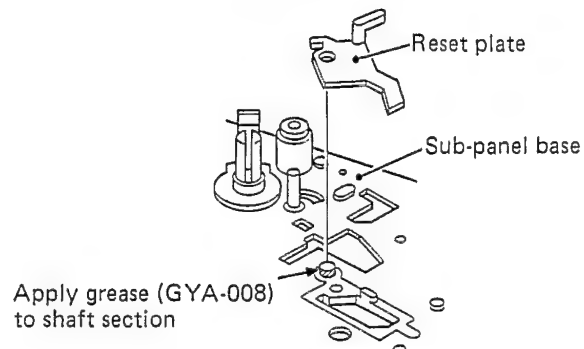


Fig. 9-6 Reset plate section

- Other Places to be Greased (PL-Z91 only)

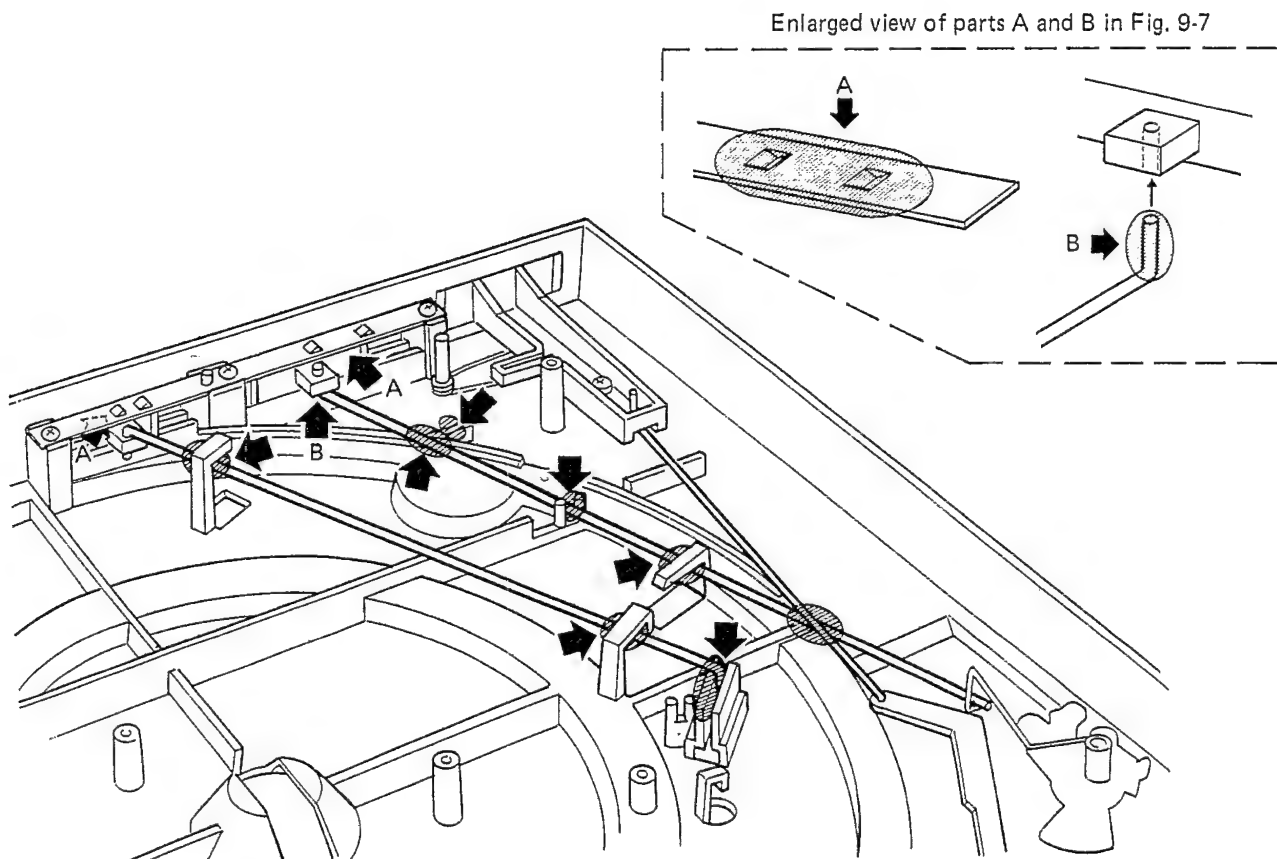


Fig. 9-7

• Other Places to be Greased (PL-Z81 only)

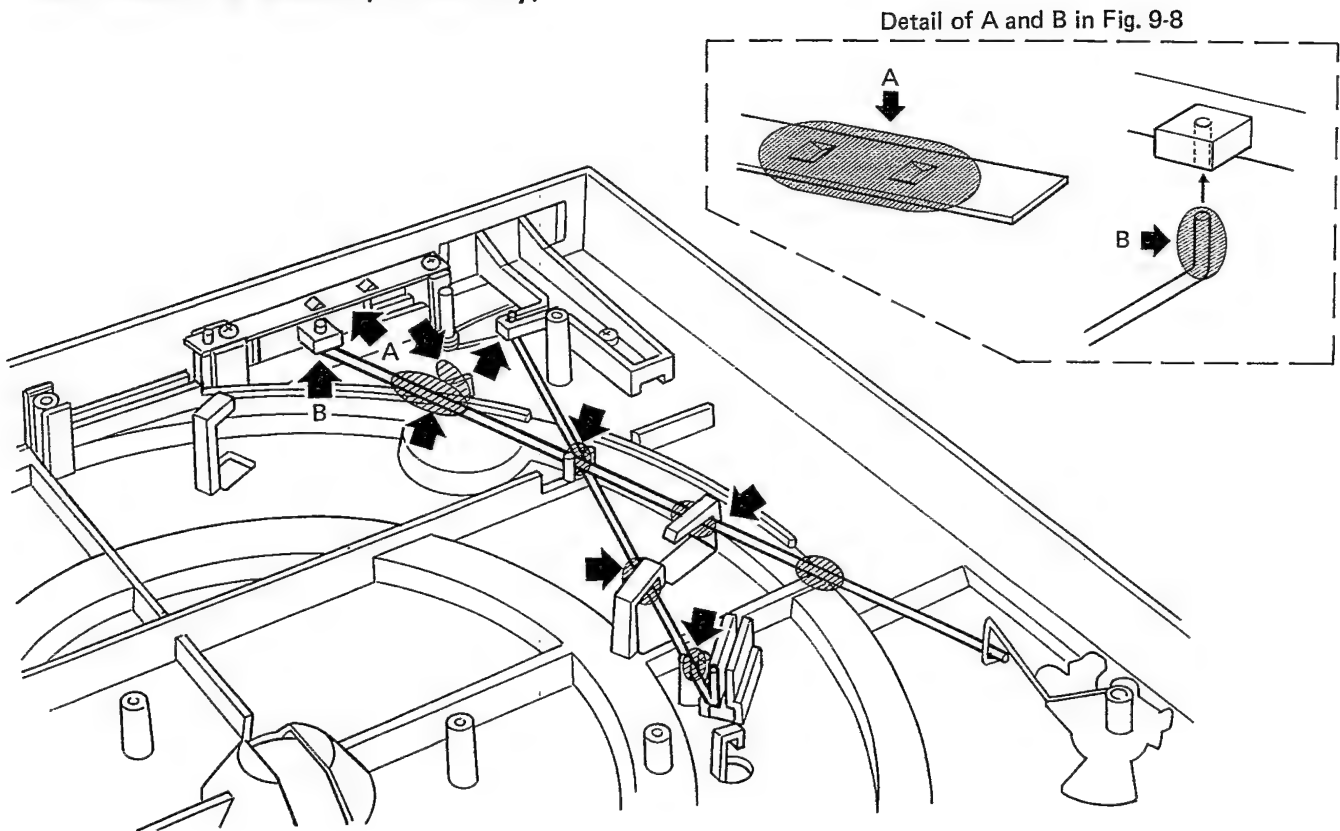


Fig. 9-8

9.2 PRECAUTIONS FOR ATTACHMENT OF PARTS AND REASSEMBLY

• Cam Assembly Attachment

The cam assembly is attached by letting the lock spring go in the direction **A** as shown in Fig. 9-9.

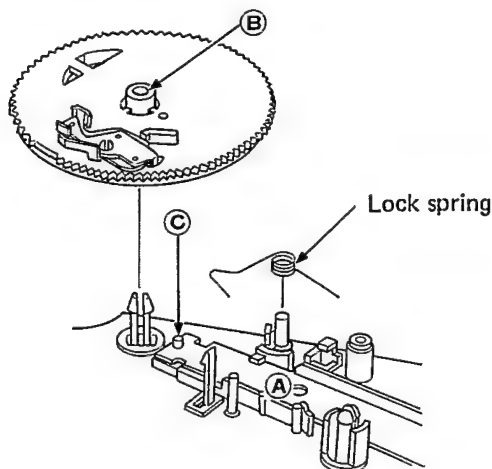


Fig. 9-9 Cam assembly attachment

• PU Plate Assembly Attachment

The PU plate assembly is attached with screw **B** by pushing the PU plate bearing section against the arm rotating shaft fixing nut.

The attachment direction is matched to the center of the support line as shown in Fig. 9-10. (position the tonearm above the arm rest).

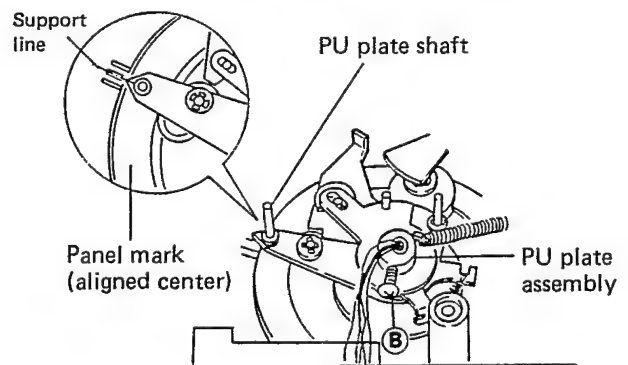


Fig. 9-10 PU plate attachment

• Arm Base Attachment

When mounting the subpanel assembly to the unit (panel), set the position of the switch locker in the subpanel assembly and the switch lever so that the microswitch (S1: for power on/off) is in the OFF position. Also set the tonearm above the arm rest. Set the arm elevator to UP. Then when the subpanel is mounted, mount the PU plate shaft in the position shown in Fig. 9-11.

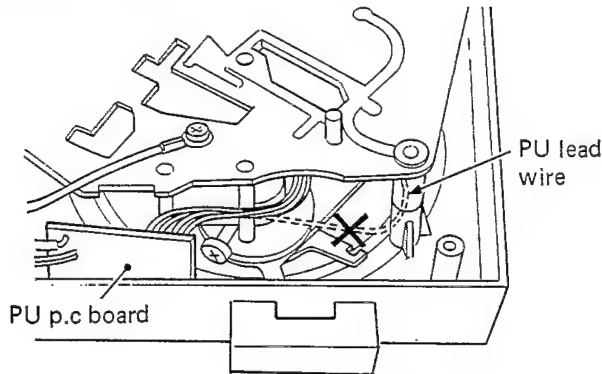


Fig. 9-11 Arm base attachment

3. MICROSWITCH LEAD WIRE STYLING CONFIRMATION (PL-Z91 only)

When attaching the mechanism assembly to the panel, be careful that the lead wires do not contact the select lever as shown in Fig. 9-12. If the lead wires contact the select lever, record size detection will malfunction.

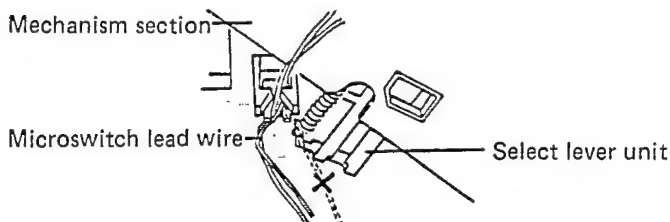


Fig. 9-12 Microswitch lead wire attachment

• Start Lever Unit Attachment (PL-Z91 only)

Attach the shaft section of the start lever unit as shown in Fig. 9-13 so that it comes between the reset plate and start plate.

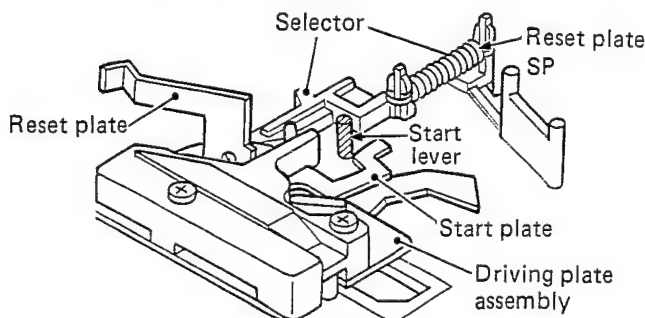


Fig. 9-13 Start lever unit attachment

• Spindle Assembly Attachment (PL-Z91 only)

When installing the spindle assembly, set the cam in the mechanism stop location and verify that the starting plate section (B) does not protrude beyond surface (A) of the cam. If the spindle assembly is attached with the starting plate section (B) protruding, the starting plate may be deformed, the spindle assembly pinion gear may be scratched, and the return function may be come disabled.

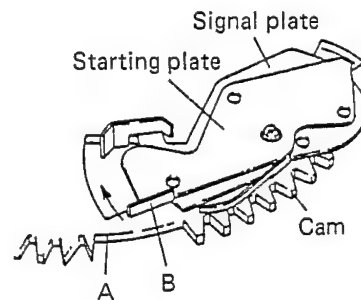


Fig. 9-14 Spindle assembly attachment

• Installing the Cords (PL-Z91 only)

For the styling of the PU cord assembly and other lead wiring, refer to Fig. 9-15.

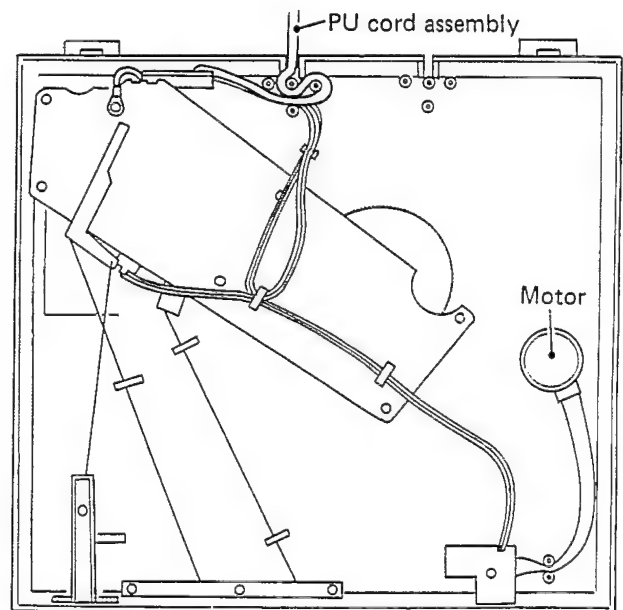


Fig. 9-15 Cords stringing

10. ADJUSTMENTS

10.1 MOTOR ADJUSTMENTS

Place the record player on blocks as shown in Fig. 10-1 and adjust the motor from the under base.

1. Turn the arm elevation lever up to raise the arm.
2. Place a strobo sheet on the turntable, move the arm to the turntable side, and rotate the turntable.
3. Adjust semifixed resistors VR1 and VR2 of the motor assembly so the 33-1/3 rpm and 45 rpm strobo of the strobo sheet appears to the static.
4. First adjust VR1 for 45 rpm and then the adjust VR2 for 33-1/3 rpm.

10.2 STYLUS LANDING POSITION ADJUSTMENT (PL-Z91 only)

When the tonearm doesn't land in the correct position during automatic playback, adjust according to the following procedure.

1. Place a 30cm record on the platter.
2. Press the START/STOP switch and start automatic playback. Note the landing position of the stylus. (How many mm to the inside or outside compared to the proper landing position on the platter.)
3. Depress the START/STOP switch to return the tonearm to the tonearm rest.
4. Press the arm elevation switch to raise the stylus.
5. With the adjustment hole visible, move the tonearm to the edge of the record by hand.
6. Turn the adjustment screw with a small screwdriver according to step 2 as follows:
 - When the stylus lands at the outside of the record, turn the adjustment screw clockwise.
 - When the stylus lands on the proper position toward the record center, turn the adjustment screw counterclockwise. One half turn of the adjustment screws moves the tonearm about 12mm.
7. After adjustment, press the START/STOP switch and check if the stylus landing point was correctly adjusted.
If adjustment is incorrect, repeat steps 3 to 6.

Be careful not to damage the record and stylus when making this adjustment.

ADJUSTMENT USING A TEST RECORD

(Landing position adjustment cannot be done when the tonearm is on the record.)

- 30cm landing point Lands between count 306 and 313.
17cm landing point Lands between count 175 and 183.

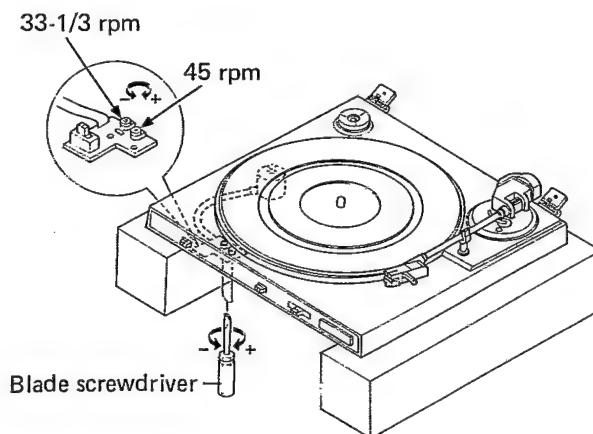


Fig. 10-1 Motor adjustment

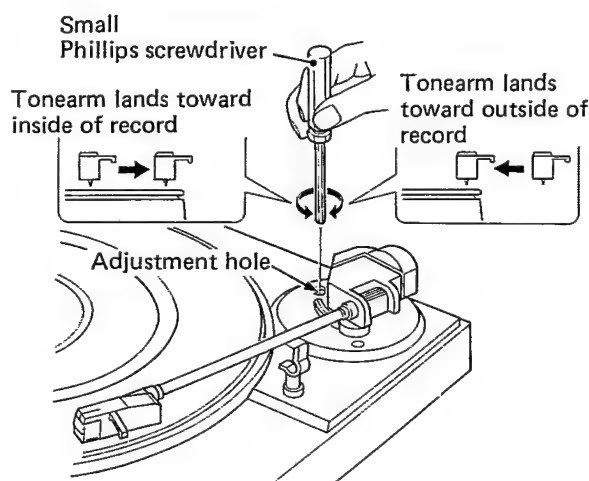


Fig. 10-2 Stylus landing point adjustment

10.3 AUTO-RETURN POSITION ADJUSTMENT

When the auto-return position is too near or too far, make the following adjustments.

1. Check the stylus landing position. If the stylus does not land at the correct position, adjust the landing position.
2. Set the arm elevation switch to UP and turn the auto-return adjustment screw fully counter-clockwise.
3. Move the tonearm as far as it will go toward the center.
4. When the auto-return adjustment screw is turned slowly clockwise, the tonearm will begin to move toward the center.
5. Stop turning the adjustment screw at the point at which there is a space of 32mm between the stylus of the cartridge and the center shaft. (Fig. 10-3)
6. After adjustment, check that auto-return is performed correctly and that the stylus landing position is correct.

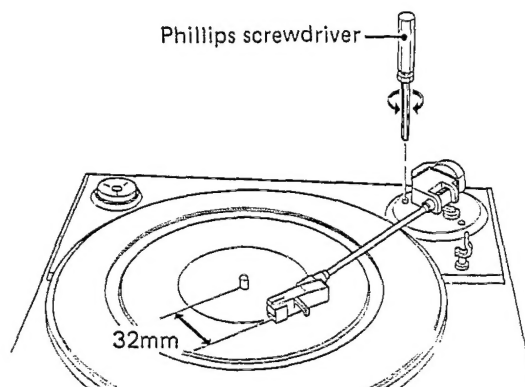


Fig. 10-3 Auto-return position adjustment

10.4 ARM ELEVATION HEIGHT ADJUSTMENT

1. Press the arm elevation switch to move the arm up.
2. Turn the height adjustment screw on the side of the arm elevation unit with a Phillips screwdriver so that the distance between the record and the stylus is 7 ± 2 mm. The arm moves up when the screw is turned counterclockwise.

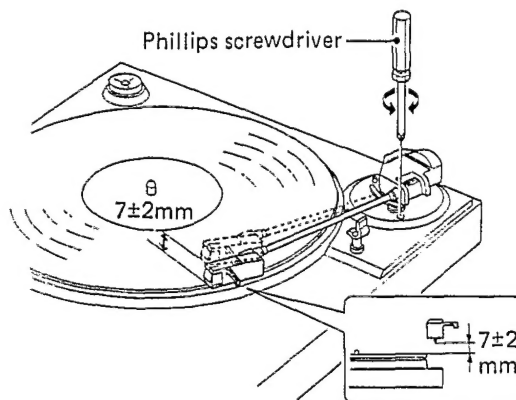


Fig. 10-4 Arm elevation adjustment

10. RÉGLAGES

10.1 REGLAGE DU MOTEUR

Placer le tourne-disque sur des blocs, comme est montré dans la Fig. 10-1 et régler le moteur depuis le dessous.

1. Tourner le levier de relevage du bras pour soulever le bras de lecture.
2. Placer une feuille stroboscopique sur le tourne-disques; déplacer le bras jusqu'au côté du tourne-disque et le faire tourner.
3. Régler les résistances demi-fixes VR1 et VR2 de l'ensemble du moteur, jusqu'à ce que la feuille stroboscopique apparaisse immobile en 33-1/3 et 45 tr/min.
4. D'abord régler VR1 pour avoir la vitesse de 45 tr/min, ensuite, régler VR2 pour 33-1/3 tr/min.

10.2 REGLAGE DE LA POSITION DE DESCENTE DE LA POINTE DE LECTURE (PL-Z91 uniquement)

Lorsque le bras de lecture ne descend pas sur la position correcte lors de la lecture automatique, réaliser le réglage en suivant la procédure suivante.

1. Placer un disque de 30 cm sur le plateau.
2. Appuyer sur la touche de marche/arrêt (START/STOP) et faire débuter la lecture automatique. Noter l'endroit du point de descente. (Nombre de mm vers l'intérieur ou vers l'extérieur par rapport au point de descente normal.)
3. Appuyer sur la touche START/STOP pour faire retourner le bras de lecture sur son support.
4. Appuyer sur la touche de relevage du bras pour soulever la pointe de lecture.
5. En ayant l'orifice de réglage visible, déplacer à la main le bras de lecture vers la périphérie du disque.
6. Tourner la vis de réglage à l'aide d'un petit tournevis, en fonction du point 2, comme suit:
 - Lorsque la pointe de lecture descend vers l'extérieur du disque, tourner la vis de réglage dans le sens des aiguilles d'une montre.
 - Lorsque la pointe de lecture descend vers l'intérieur du disque, tourner la vis de réglage dans le sens contraire des aiguilles d'une montre.

Un demi-tour de la vis de réglage correspond à un déplacement d'environ 12mm du bras de lecture.

7. Après le réglage, appuyer sur la touche START/STOP et vérifier si le réglage de la position de descente a été correctement effectué. Si le réglage n'est pas correct, répéter les étapes 3 à 6.

Prendre soin de ne pas endommager le disque ni la pointe de lecture en réalisant ce réglage.

REGLAGE AU MOYEN D'UN DISQUE D'ESSAI

(Le réglage du point de descente ne peut être réalisé lorsque le bras de lecture est sur le disque.)

Point de descente

pour 30cm Descente entre les valeurs 306 et 313.

Point de descente

pour 17cm Descente entre les valeurs 175 et 183.

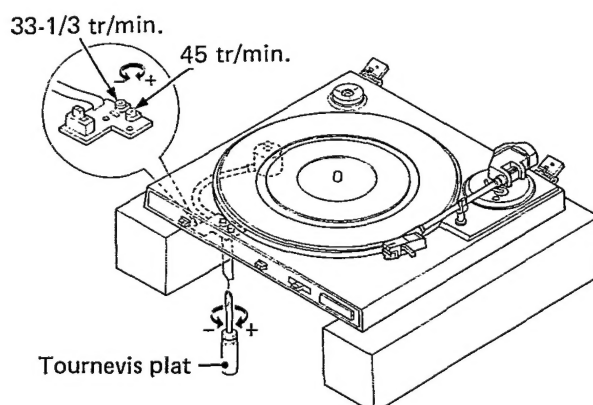


Fig. 10-1 Réglage du moteur

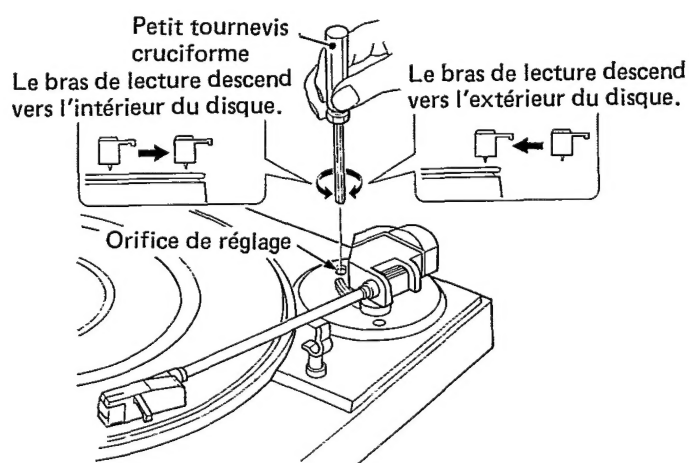


Fig. 10-2 Réglage du point de descente de la pointe de lecture

10.3 REGLAGE DE LA POSITION DE RETOUR AUTOMATIQUE

Réaliser les réglages suivants lorsque la position de retour automatique se produit trop près ou loin.

1. Contrôler la position de descente de la pointe de lecture. Si la pointe de lecture ne descend pas sur la position correcte, ajuster la position de descente.
2. Régler la touche de relevage du bras sur la position "UP" et tourner la vis de réglage du retour automatique à fond dans le sens contraire des aiguilles d'une montre.
3. Déplacer le bras de lecture le plus possible vers l'intérieur.
4. Lorsque la vis de réglage du retour automatique est tournée lentement dans le sens des aiguilles d'une montre, le bras de lecture commence à se déplacer vers le centre.
5. Arrêter de tourner la vis de réglage sur le point pour lequel il y a un écart de 32mm entre la pointe de lecture et l'axe central. (Fig. 10-3)
6. Après le réglage, vérifier que le retour automatique se réalise correctement et que la position de descente de la pointe est correcte.

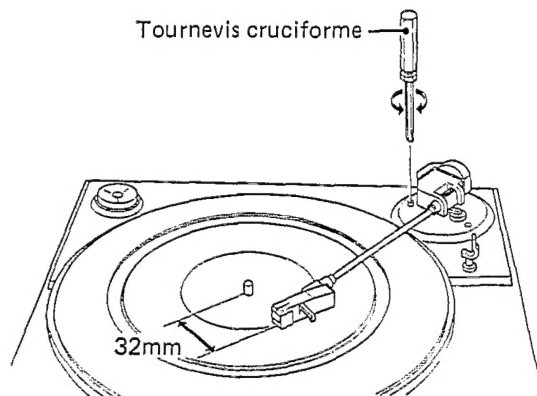


Fig. 10-3 Réglage de retour automatique

10.4 REGLAGE DE L'ELEVATION DU BRAS

1. Appuyer sur le commutateur d'élévation du bras pour déplacer le bras vers le haut.
2. Tourner la vis du côté du bloc d'élévation du bras au moyen d'un tournevis cruciforme, de telle sorte que la distance entre le disque et la pointe de lecture soit de 7 ± 2 mm. Le bras se déplace vers le haut lorsque l'on tourne la vis dans le sens contraire des aiguilles d'une montre.

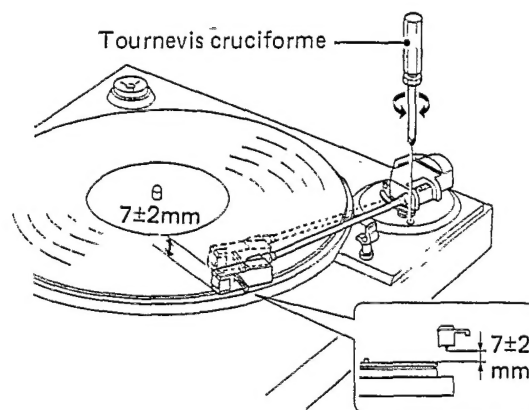


Fig. 10-4 Réglage de l'élévation du bras

10.3 AJUSTE DE RETORNO AUTOMÁTICO

Cuando la posición de retorno automático esté demasiado cerca o demasiado lejos, efectuar los ajustes siguientes.

1. Comprobar la posición de descenso de la aguja.
Si la aguja no desciende en la posición correcta, ajustar la posición de descenso.
2. Ajustar el interruptor de elevación del brazo en la posición UP y girar el tornillo de ajuste de retorno automático completamente hacia la izquierda.
3. Desplazar el brazo fonocaptor hacia el centro.
4. Cuando se giran lentamente los tornillos de ajuste de retorno automático hacia la derecha, el brazo fonocaptor empezará a moverse hacia el centro.
5. Dejar de girar el tornillo de ajuste en el punto en el que haya un espacio de 32mm entre la aguja de la cápsula y el eje central. (Fig. 10-3)
6. Después del ajuste, comprobar que la operación de retorno automático se efectúe correctamente y que la posición de descenso de la aguja sea la correcta.

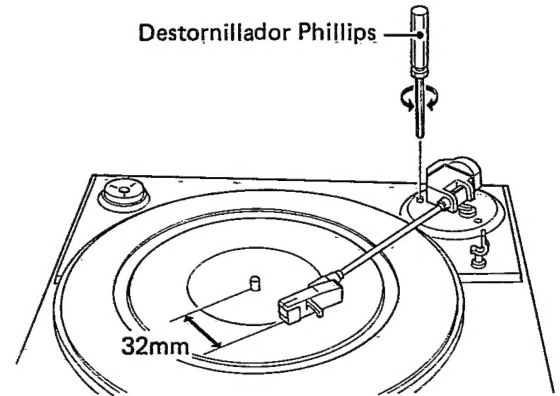


Fig. 10-3 Ajuste de retorno automático

10-4 AJUSTE DEL BRAZO DE FONOCAPTOR

1. Presionar el conmutador de elevación del brazo de fonocaptor para desplazar el brazo hacia arriba.
2. Girar el tornillo de ajuste en el lado de la unidad de elevación del brazo por medio de un destornillador Phillips, de modo que la distancia entre el disco y la aguja sea de 7 ± 2 mm. El brazo se desplaza hacia arriba girando el tornillo en sentido contrario al de las agujas del reloj.

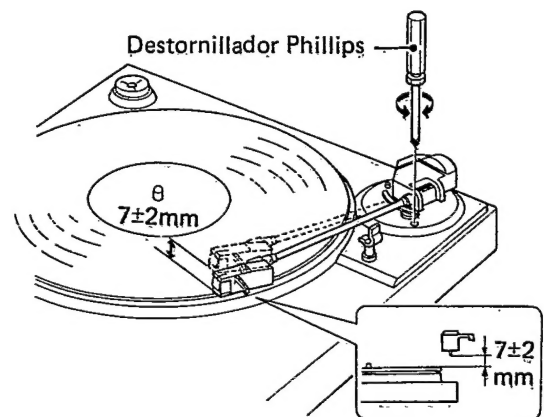


Fig. 10-4 Ajuste del brazo de fonocaptor